

190 Heavy three-rail sliding door Installation Instruction

Installation tools and accessories



Hexagonal tools



Power drill



Laser level




Plastic stopper




Expansion anchor bolt


Horizontal measurement

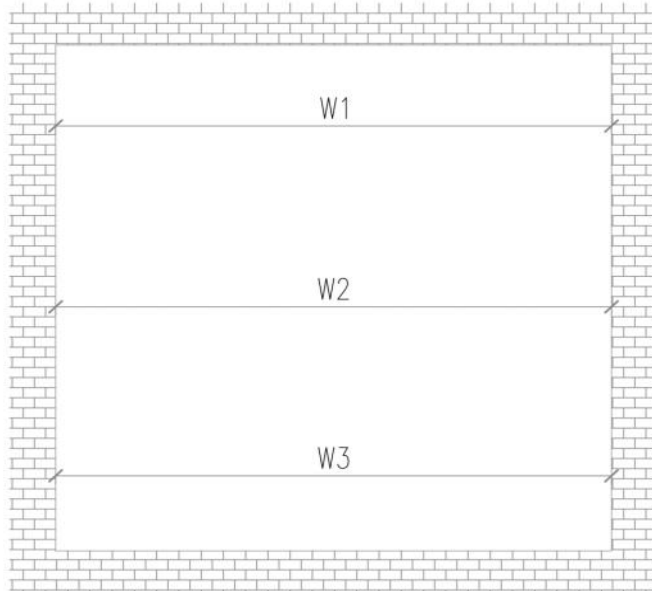

Measure 3 points horizontally

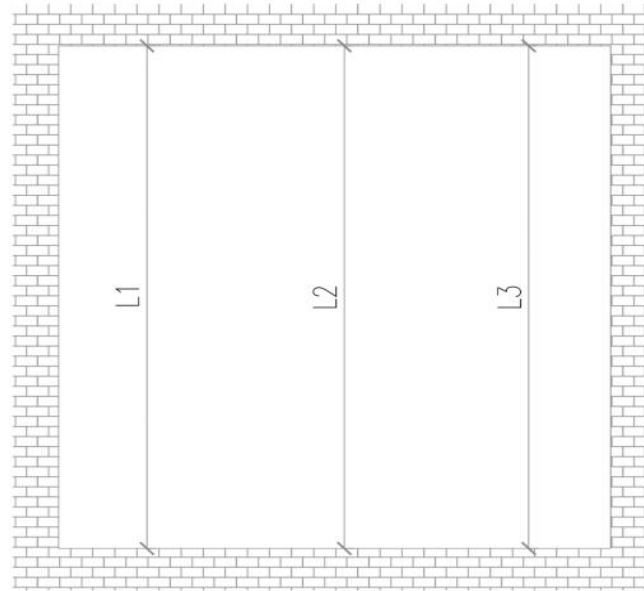


Measure 3 points vertically

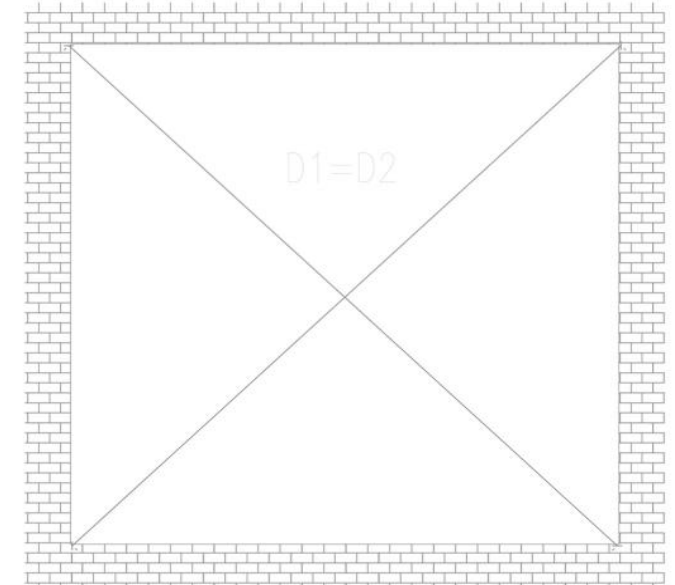


Cross measure the diagonal points


Node Drawing

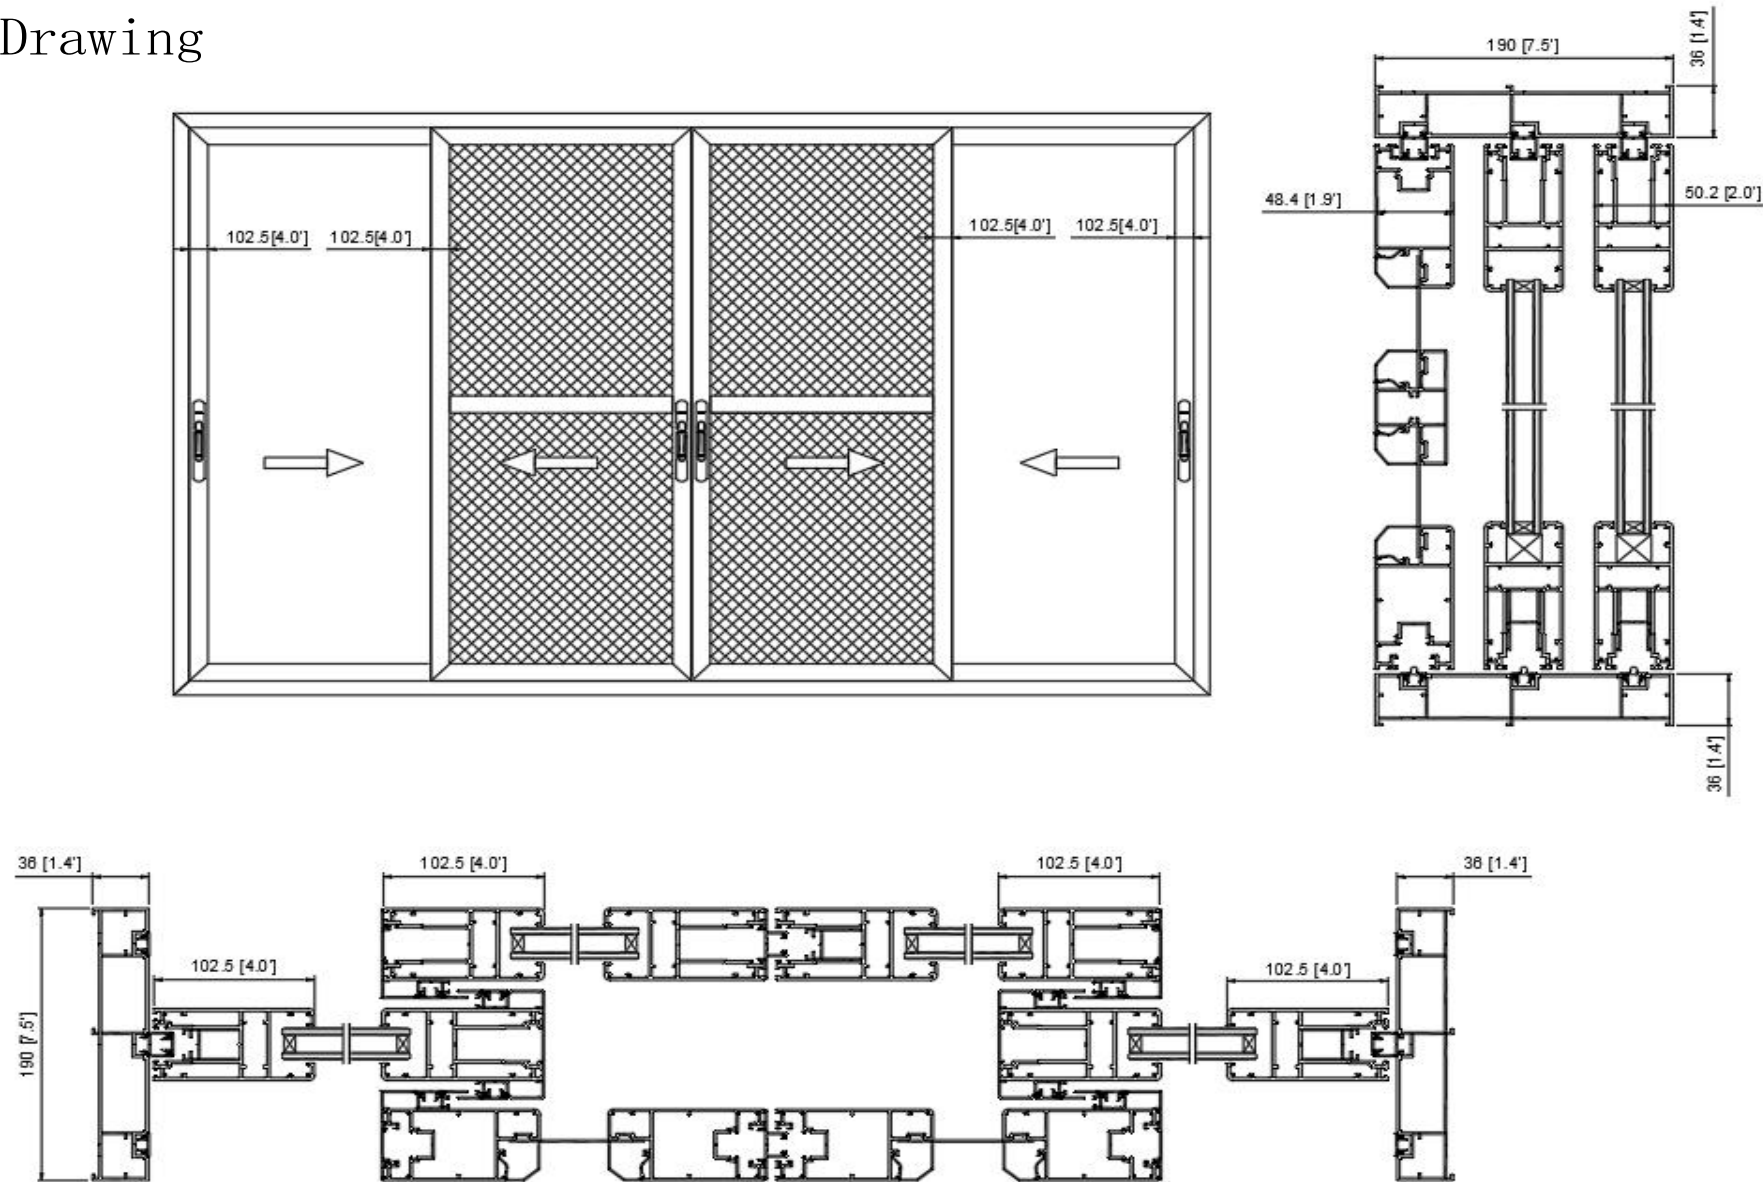


Install the outer
frame first

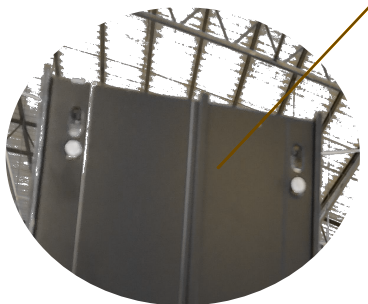


After the 4 corner codes are
installed

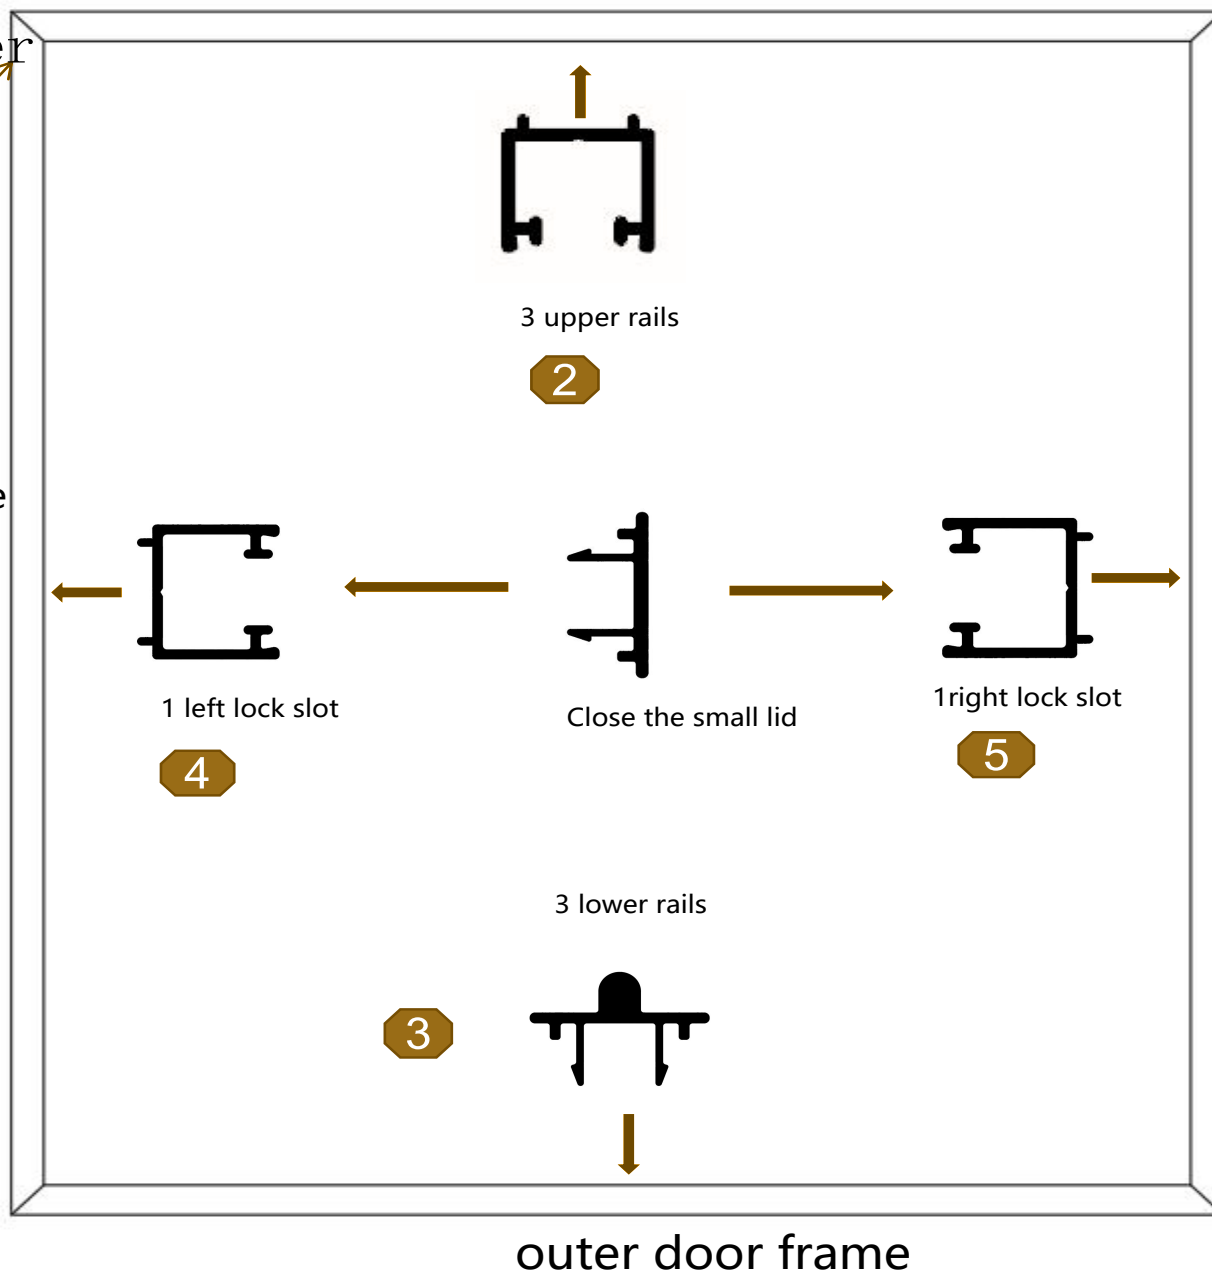

1 mounting angle code


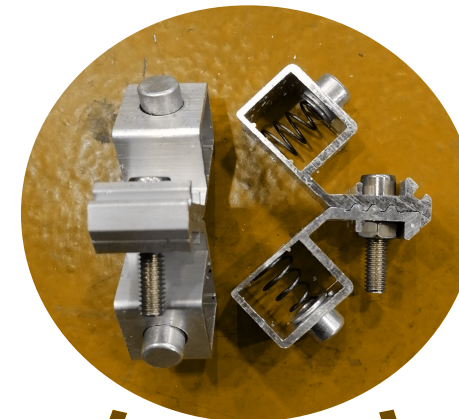


frame corner code



Outer frame profile section


How to Measure

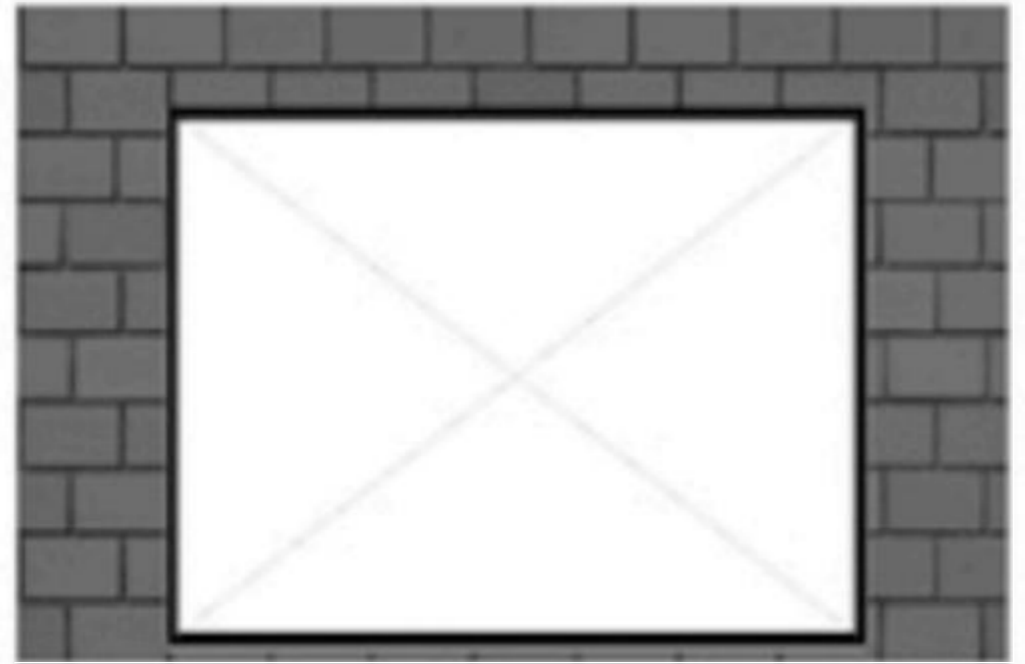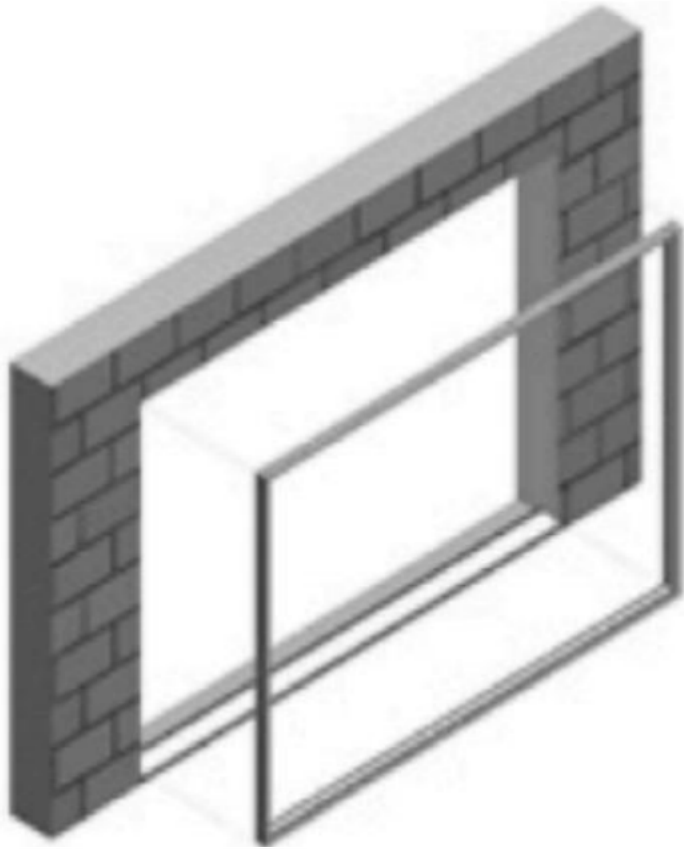

Install the door panel 1




3 Right against the notch bit pressure Insert adhesive strip

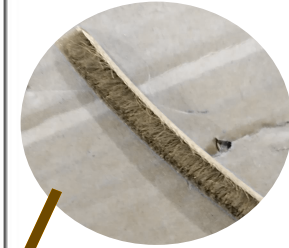

Insert the top strip at the side notch

2


corner code for all 4 corners

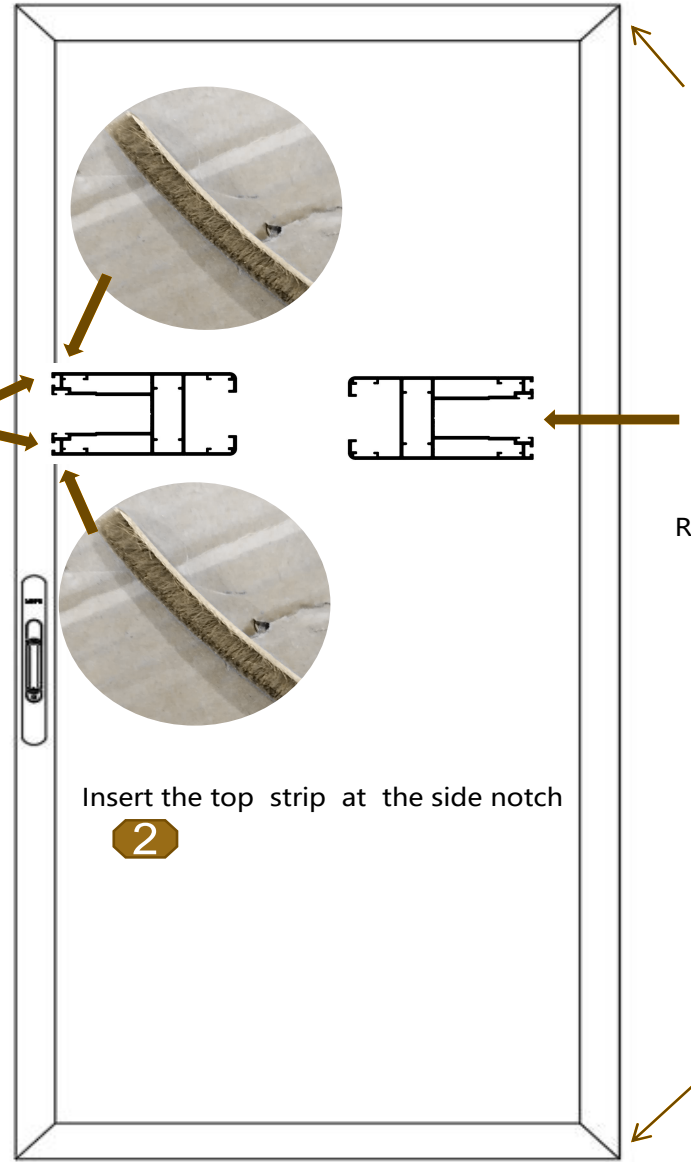

center glass panel

1


insert corner code ,
corner code seet ,
insert glass

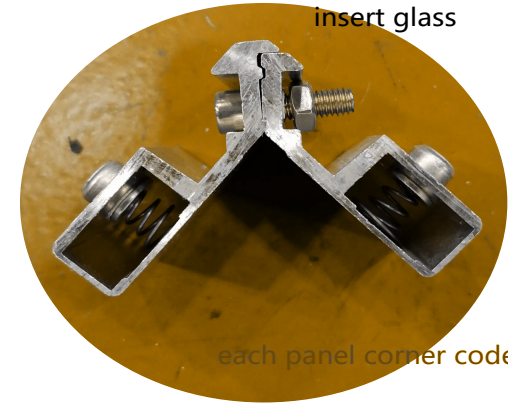

each panel corner code



Right side with a double hook

4

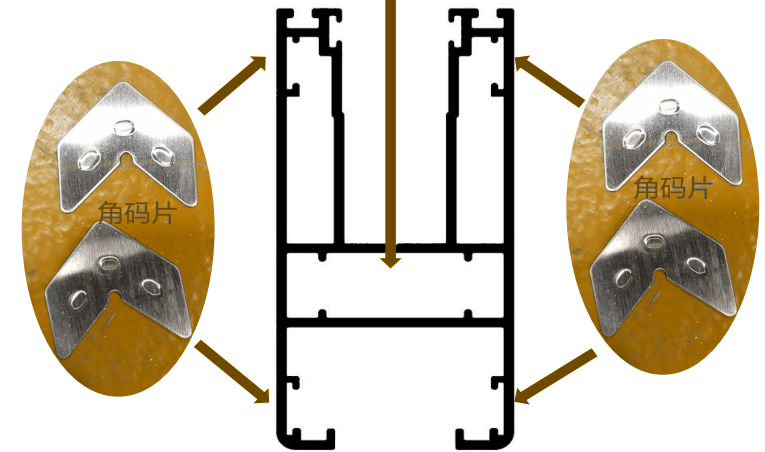


Section diagram of door panel

Install door panels 2

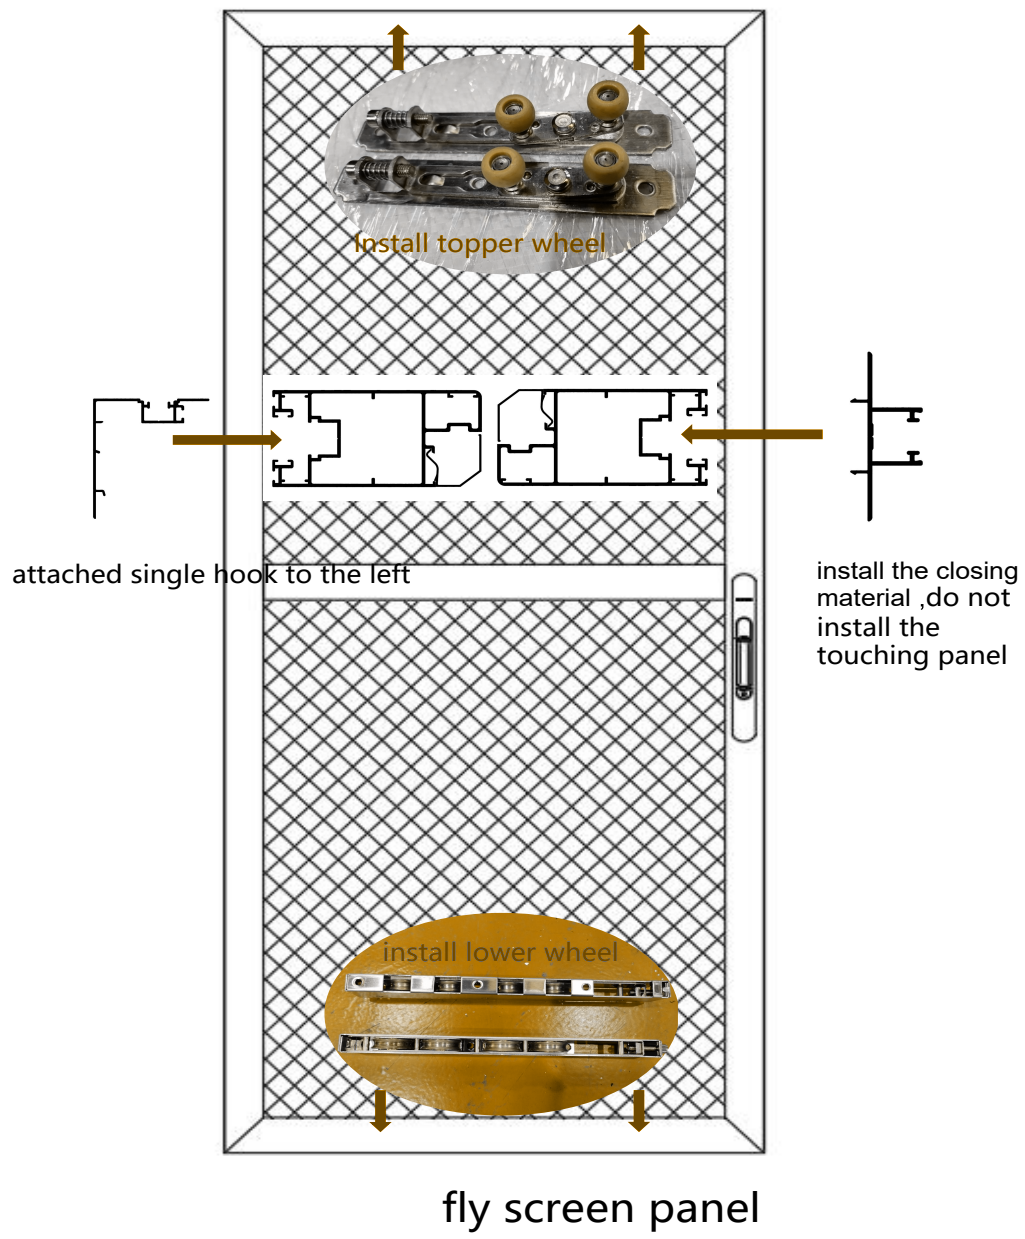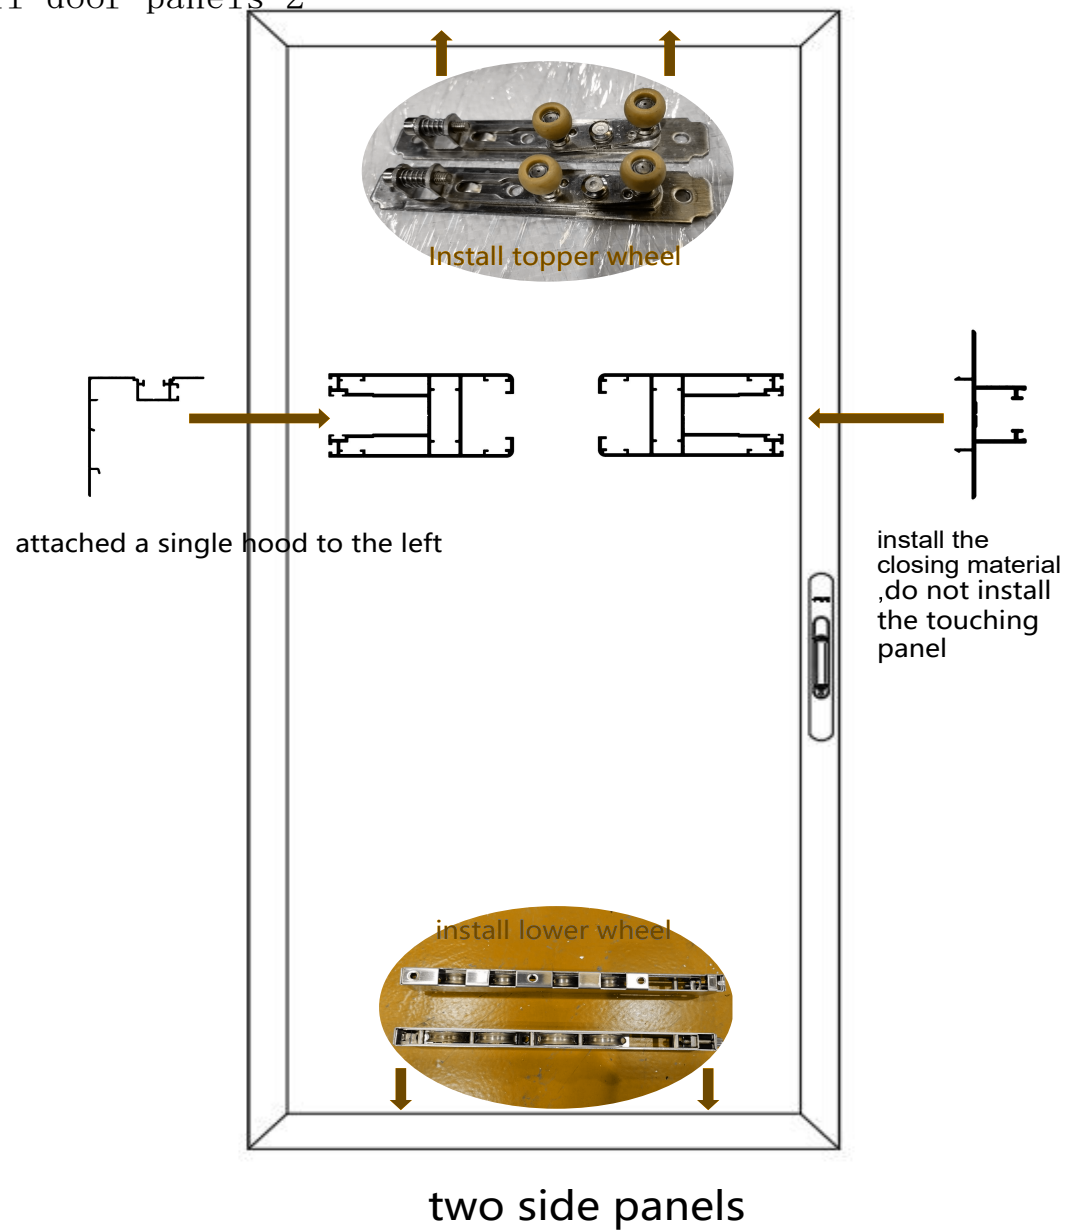

Install hardware

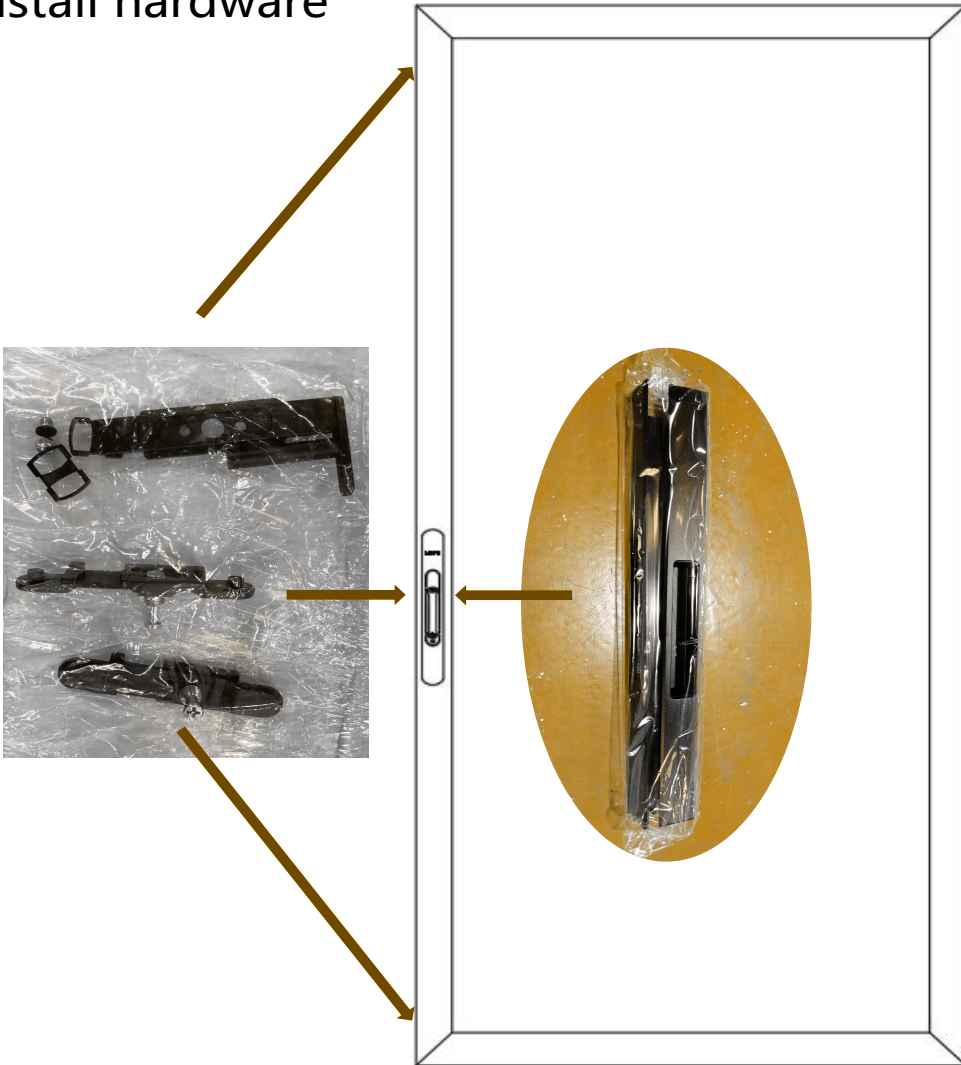

Door panel (including fly screen panel) hardware



Door Frame hardware

Finished outlook

